

Lock-N-Load® Auto Progressive (AP) Pistol Bullet Feeder

PARTS LIST

Item No.	Production Part No.	Qty.	Description
1	392011	3	Nut Hex 10-32 Zinc
2	399209	1	Steel Knurled Thumb Screw
3	399213	1	Tube Spring Clamp
4	399210	1	BHCS 10-32 X 1/4
5	399214	1	Tube Bullet Drop Funnel Large
5	399215	1	Tube Bullet Drop Funnel Medium
5	399216	1	Tube Bullet Drop Funnel Small
6	399205	1	Screw Adjustment Bullet Feed
7	399206	1	Screw Lock Nut Adjustment
8	398067	1	Rubber Washer Flat
9	399208	1	Center Plate Adjustment Nut
10	398400	1	Thumb Screw 1/4-20 X 1/2
11	399202	1	Hopper Turning Plate
12	398401	2	Screw FHSCS 10-32 X 1/4
13	399201	1	Bullet Feed Wheel - Pistol
14	399212	3	Nut Hex 1/4-20
15	399207	1	Center Pin Bullet Plate
16	399218	1	Spur Gear 1.500 P.D., 30 Tooth
17	398313	8	Screw FHSCS 10-32 X 3/4
18	399203	1	Bullet Feeder Base Plate
19	398402	1	Ideler Gear Shaft
20	399102	1	Spur Gear 1.200 P.D. 24 Tooth

Item No.	Production Part No.	Qty.	Description
21	399244	1	FHCS 1/4-20 X 1/2
22	398381	1	Pin Spirol 1/8 X 3/4
23	398399	1	Motor Bullet Feeder
24	399222	2	Screw Bullet Wiper
25	399242	6	Nut Wing 1/4-20
26	399223	2	Spring Wiper Bullet Feed
27	399224	3	Thumb Screw 8-32 X 1/2
28	399217	1	Tube Holder Bullet Feeder
29	399200	1	Bullet Feed Hopper
30	399211	2	SHCS 1/4-20 X 2
31	390128	6	Washer Flat 1/4"
32	398418	1	Bushing (HEYCO 1147) Black
33	399219	1	Tube Drop Small
33	399243	1	Tube Drop Medium
33	399221	1	Tube Drop Large
34	398332	1	Switch 2 Position
35	399204	1	Square Tubing
36	399358	1	Support Tube-Bottom
37	399359	1	Support Tube-Top
38	399360	2	1" Square Finishing Plug
39	399362	2	1/4-20x2.5 Carriage Bolt